

Display Mounting Instructions.

Step 1. Determine the location for hanging.

Step 2. Locate the center point of the hanging location and mark the wall using a pencil.


Step 3.

For two mounting hole displays.

Measure the distance between the mounting holes on the display and divide by two. (In most cases this will be $16'' / 2 = 8''$) Using this number mark the wall with a vertical line once to the left and again once to the right of your center point. (You may want to use a level to ensure your marks are perpendicular to the floor)

For three mounting hole displays.

Measure the distance from the center hole to the left hole on the display and mark the wall, to the left of your center mark, with a vertical line using this number. (In most cases this will be 16'') Use the same method to mark the right hole. (You may want to use a level to ensure your marks are perpendicular to the floor)

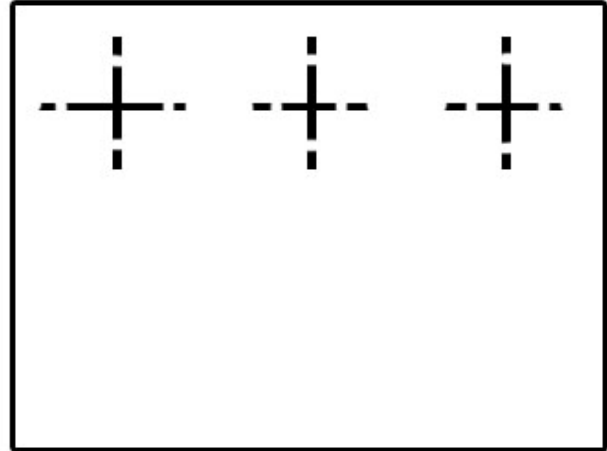

Step 4. Determine the height off the floor to the top of the location on the wall where the display is to be hung and subtract 3'' (i.e. if the desired distance from floor to the top of display is $72'' - 3'' = 69''$)

Step 5. Measure up from the floor to the dimension determined in step 4 and mark the wall with a horizontal line at the points where they will intersect with the vertical marks made in step 3. (If the horizontal and vertical lines marked on the wall do not intersect simply extend them until they do.)

This has now determined the location where each screw will be placed on the wall.

Step 6. Determine if wall studs are located behind the points where the lines intersect from step 5 either by using a stud finder or by using a small nail pounded through the wall.

Step 7. *If no studs are found go to Step 8.* If wall studs are found simply insert screws at the points where the lines intersect from step 5 leaving the head of the screw remaining approximately $3/16''$ from the wall. Erase any visible pencil marks and you are ready to hang your display.

Step 8. When no studs are found you can either:

Adjust the display mounting location to the left or right to line up with the studs for the best possible mount. Then go back to Step 7.

Or

Use wall anchors to secure screws to the wall at the points where the lines intersect from step 5. We recommend a screw-in style wall anchor. *Bottom Photo* Do not use toggle style anchors as they will not work for this type of mounting.

Once the anchors are securely in the wall insert screws leaving the head of the screw remaining approximately $3/16''$ from the wall. Erase any visible pencil marks and you are ready to hang your display.

